ADDENDUM

Single Channel 170 MHz Wireless FM PA Amplifier System

Cat. No. 32-1240

The instructions included in “Operation” on Page 4 were incomplete. Follow the instructions below to operate your system.

Notes:

- You can use a wireless microphone and a wired microphone at the same time.
- Wireless microphones are sold in three channel combinations: AEH, BDG, or CFH. Be sure your wireless microphone’s operating frequency channel or channel combination matches the letter on the label located near the **ON/OFF** switch of this unit.

Using a Wireless Microphone

1. Set **WIRELESS MIC VOLUME** to the minimum level.
2. Set **ON/OFF** to **ON**. The power indicator lights.
3. Set the wireless microphone’s **OFF/STANDBY/ON** switch to **ON**. The READY indicator lights.

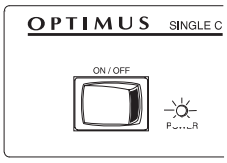

© 1999 Tandy Corporation.
All Rights Reserved.
RadioShack and Optimus are registered trademarks used by Tandy Corporation.

4. Adjust **WIRELESS MIC VOLUME** to the desired level slowly.
5. Turn the volume level to the minimum position and press the power switch to **OFF** when the amplifier is not in use.

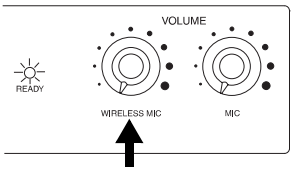

Using a Wired Microphone

1. Connect the wired microphone to the amplifier's **MIC** jack located on the back of the amplifier.
2. Set **MIC VOLUME** to the minimum level.

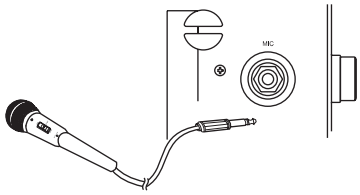

3. Set **ON/OFF** to **ON**.The power indicator lights.
4. Set the microphone's switch to **ON**.
5. Adjust **MIC VOLUME** to the desired level slowly.
6. Turn the volume level to the minimum position and press the power switch to **OFF** when the amplifier is not in use.

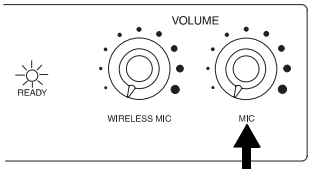

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102

09A99

811589280A
Printed in China